

GLIDEROL TM390+

Grey Button

PROGRAMMING INSTRUCTIONS




Programming to Opener Glidermatic GRD+, GTS+ and GTS+ Optima

Motor: Press and HOLD the “ENTER” button for 2 seconds, unit will beep twice

Motor: Use the arrow button (up or down) to select the “Learn” option, then press “ENTER”, unit will beep three times

New Remote: Press and HOLD the desired button on your remote - One Beep = Remote successfully coded. Two Beeps = Remote already coded

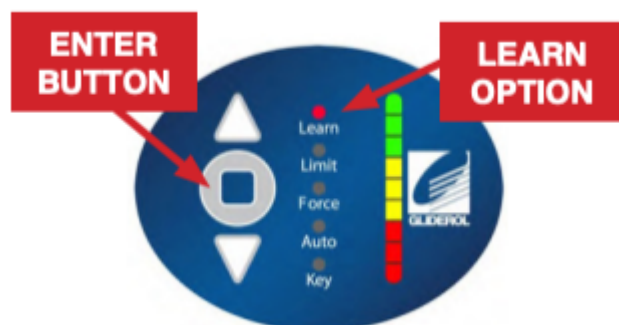

Clearing the Memory

Motor: Press and HOLD the “ENTER” button for 5 seconds

Programming to Genesis and Genesis Optima

Motor: Press the “CODE” button, “-.-” will show on display

New Remote: Press and Hold the Desired button on your remote until the dots flash on display.

Clearing the Memory

Motor: Press and HOLD the “CODE” button for 8 seconds, Dots on display will disappear once memory cleared.



Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information .