

DACE TM4 Remote

PROGRAMMING INSTRUCTIONS



Programming a New Remote

The majority of DACE Control Boards utilise a jumper coding pin setup. The location of this usually 4 (2x2) setup can vary between the versions. You will need to find these four pins and the jumper pin to program New Remotes.




Jumper Pin

New Remote: Press and Hold the button that you wish to activate the gate.

Motor: Place the Jumper pin over the two pins **TX-L** for 2 seconds.

Motor: Remove the jumper from the two pins
Release the remote.

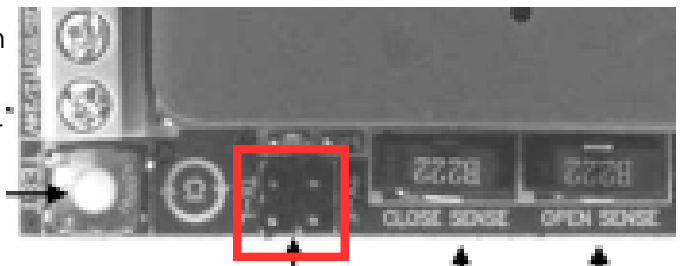

Clearing the Memory

Motor: Place the jumper over the two pins called **TX-E** and count 4 flashes on the yellow LED on the receiver.

Remove the jumper

Motor: Repeat for 2 flashes on LED

Remove the jumper

Motor: replace the jumper and count 4 flashes on the LED

The time between the jumper being removed and replaced on the pins must NOT exceed 2 seconds



Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.