

GENIUS Echo Remote

PROGRAMMING INSTRUCTIONS



Remote to Remote

You will need to be in close proximity to your opener

Working Remote: Press and Hold P1 and P2 simultaneously on the remote control until LED flashes

Working Remote: Press the button that currently activates your device

New Remote: Press the button that you would like to activate your device.




Remote to Receiver

Opener: Press the Push Button for the Channel - Most control panels have SW1

LED will turn on

New Remote: Press and hold the button you would like to activate your device for at least 2 seconds.

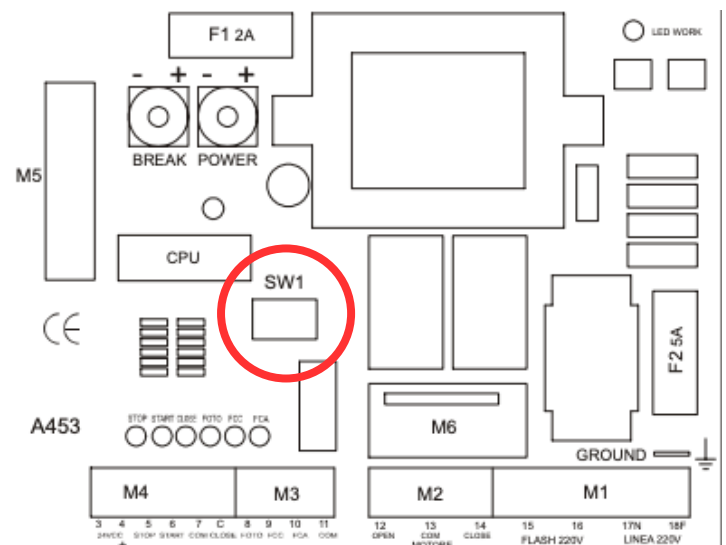

Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.