

ELSEMA PENTAFOB

PROGRAMMING INSTRUCTIONS



Programming to a Penta Receiver

Make sure you have power to your receiver and that all 12 dipswitches are in the OFF position

Receiver: Press and Hold the Program Button on the receiver

Transmitter: Press the Remote Button for 2 seconds
Receiver LED will flash and then turn green.

You can now release the Program button on the receiver.

Programming Remote to Remote

You will need to be near the receiver for this procedure

Working Remote: Open the case of a working remote;
Press and Release the program button on the back of remote.



Working Remote: Press the button for 2 seconds which activates the receiver.

New Remote: Press the button for 2 seconds on your new remote.

Working Remote: Press the program button on back of remote.

Clearing Memory

Receiver: Short the code reset pins on the receiver for 10 seconds.
This deletes all transmitter from the receivers memory.

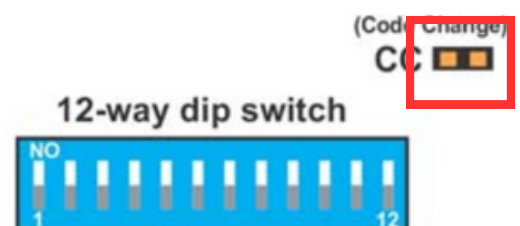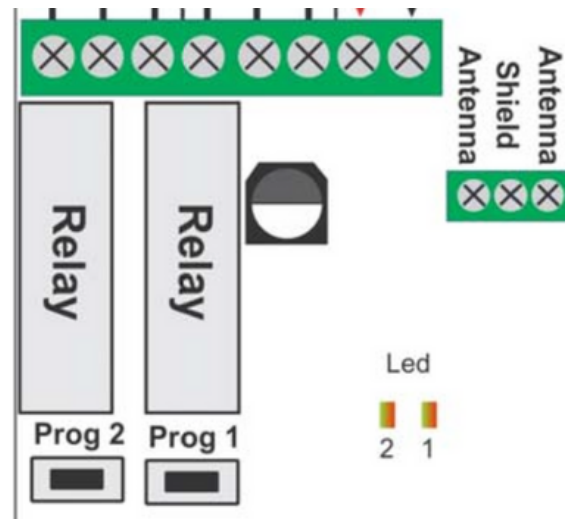

Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.