



07 3568 7888

www.retroremotes.com.au sales@retroremotes.com.au

## **ACDC REMOTES**

### PROGRAMMING INSTRUCTIONS

### **ROLLER-GLIDE**

- OPENER: Remove the white plastic light diffuser take care of push button attached
- OPENER: Press and Release the LEARN button
- NEW REMOTE: Press the button on the NEW remote, wait 2 seconds and then Press the button on NEW remote again.

Deleting all Remotes from Opener

Press and Hold the LEARN button on Opener for 15 seconds.

## 3 LEARN OPEN 4 OPEN FORCE POWER LED CLOSE O CLOSE FORCE

### **POWER-GLIDE & EURO-GLIDE**

- OPENER: Press and Release the LEARN button, dot will illuminate in corner of LED display
- NEW REMOTE: Press the button on the NEW remote, dot will turn off, wait 2 seconds and then Press the Button on NEW remote again, LED will flash 8 times and then turn off.

### Deleting all Remotes from Opener

Press and Hold the Learn button for 8-10 seconds until C flashes on the LED Screen to confirm deletion

### **SLIM-GLIDE**

- OPENER: Remove the light diffuser cover.
- OPENER: Press K1 button on control board, coding light will turn on
- NEW REMOTE: Press the button on the NEW remote, coding light will turn off, wait 2 seconds and then Press the Button on NEW remote again, coding light will flash 8 times and then turn off.

### Deleting all Remotes from Opener

Press and Hold the K1 button on Opener for 8-10 seconds

# Eurog lide SET UP LEARN DOWN LED Display

### **GL24**

- OPENER: Press and Hold down button "P2", LED "L4" will flash slowly
- NEW REMOTE: Whilst LED "L4" is flashing, Press the button on the NEW remote, "L4" will continue flashing, wait 2 seconds and then Press the Button on NEW remote again, "L4" will remain lit for 2 seconds then turn off.

### <u>Deleting all Remotes from Opener</u>

Press and Hold "P2 and P3" button for more than 4 seconds. LED "L4" will remain lit during the entire deletion process (approx 8 seconds). Once LED turns off the deletion process is complete.

