

CODE EZY CLASSIC

PROGRAM INSTRUCTIONS




Programming New Remotes

On Receiver: Press and Release the Code Switch Button, LED will light up

On Remote: Press top left button on remote until LED light goes out.

Note: Remote will be memorised on all four (4) buttons

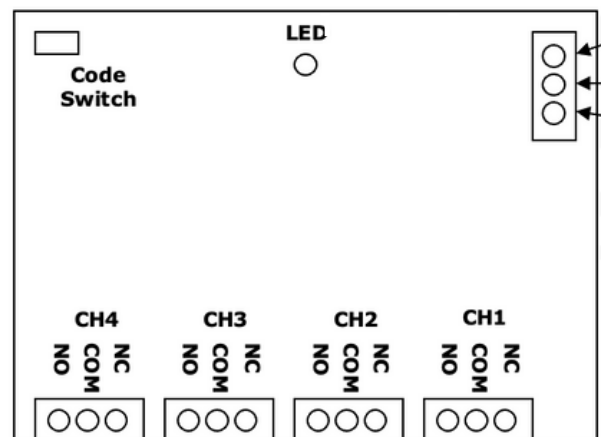

Clearing the Memory

On Receiver: Press and Hold the Code Switch Button for 8-10 seconds, LED will flash four (4) times.