

CODE EZY LOYAL

Chamberlain/B&D 4335A and 4333A

PROGRAM INSTRUCTIONS



Programming the Remote

Learn button can be found on the back of the overhead motors - large coloured push button. On Roller Doors it will be "Code Set"

New Remote: Press and HOLD the button on the new remote.

Motor: Press and Release the Learn Button on the motor.

Indicator light will flash.

Remote: Release the button on remote



Clearing the memory

Press and hold the Learn button on the opener until the indicator light goes out (approximately 6 seconds).

