

CODE EZY DEVON PROGRAM INSTRUCTIONS



Programming Remote to Sectional/Tilt Opener

Motor: Locate the Learn Button - Undo 2 Screws on rear of cover, hinge will release exposing a grey receiver with two LED's (Green and Orange).

Receiver: Open Small Window on Receiver and expose Learn Button,

Receiver: Press button, Yellow LED will light up confirming Learn Mode

Remote: Press button on New Remote until Green LED flashes, Release

Remote: Press button again, Green LED will stay on for 2 seconds. Wait 10 seconds for Yellow LED to go out



Programming Remote to Roller Door

Motor: Locate the Learn Button -


Newer Models will have holes on the rear of the control box. Lift the control box off screw on wall and check for 3 holes. Hole without LED will be your Learn Button.

Older Models (it is best to turn power off whilst you look for the learn button). It will require you to remove the cover on the control box to expose the receiver. The Learn button will be facing the wall.

Receiver: Press button, Yellow LED will light up confirming Learn Mode

Remote: Press button on New Remote until Green LED flashes, Release

Remote: Press button again, Green LED will stay on for 2 seconds. Wait 10 seconds for Yellow LED to go out

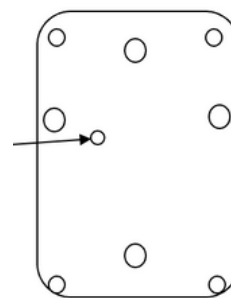

Clearing Memory

Motor: Turn power off to motor

Receiver: Press and Hold the Learn button down whilst turning on power, 2nd Red LED will light to confirm deletion.

