

CODE EZY SMART

Smart Openers

PROGRAMMING INSTRUCTIONS



Programming to Smart Slider

Motor: Press the "Code" Button

New Remote: Press the button on remote twice

First press will tell you Remote # and second press will display
CODE SET

Clearing the Memory

Motor: Hold down the "Code" for 5 seconds, Delete Remote ALL
when show on display

Motor: Hold down the "Code" button for 3 seconds to confirm
ALL.



Programming to Smart Nano

Motor: Press the "Code" Button

New Remote: Press the button on remote twice


First press will tell you Remote # and second press will display
CODE SET

Clearing the Memory

Motor: Hold down the "Code" for 5 seconds, Delete Remote ALL
when show on display

Motor: Press Mode Button until "Del Remote ALL" is on Screen

Motor: Hold down the "Code" button for 3 seconds to confirm
ALL.

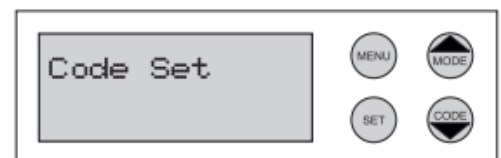

Programming to Smart Lifter


Motor: Press the "Code" Button, LED display displays dot

New Remote: Press the button on remote, LED dot will turn off

New Remote: Press the button again, dot will flash to confirm
coding.

Clearing the Memory

Motor: Press and HOLD the "Code" button for 8 seconds.

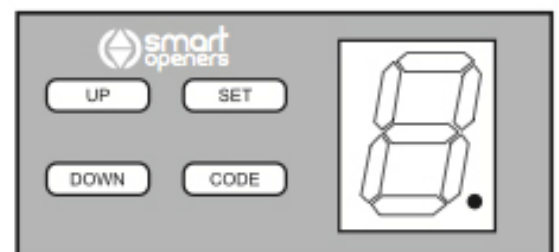

Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.