

DITEC SLIM-2E and 4E

Compatible with GOL4 and ZEN2/4

PROGRAM INSTRUCTIONS



Programming via a working remote

You can use a working genuine remote to program in a NEW remote. Check below for instructions to match your working remote NOT your new remote. You will need to be within close proximity to your gate motor.

GOL4 Remote

Working Remote: Use a paperclip or pin to press the hidden button for 5 seconds, red LED will illuminate.

New Remote: Press a button to activate position.




ZEN Remote

Working Remote: Press and Hold the top and bottom button until LED lights up.

Working Remote: Press and Hold top and bottom buttons again until LED flashes twice

New Remote: Press a button to activate position.

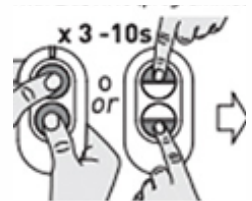

SLIM REMOTE

Working Remote: Press top two buttons remote at the same time, LED turns on for 2 seconds.

Working Remote: Press and hold top two buttons until LED starts flashing.


New Remote: Once flashing ends on working remote, press a button to activate position.



Programming via control board (without an LCD Screen)

Control Board: Press the Programming Button (PRG) until LED illuminates

New Remote: Press a button to activate position. LED will blink and then stay solid for 10 seconds.

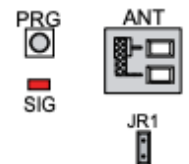

Programming via control board (with an LCD Screen)

Control Board: Your control board will have 4 buttons - UP, DOWN, OK and ESC. Above this will be an LCD Screen that will register codes.

Control Board: Press OK to activate the Menu

Control Board: Use the Up and Down buttons to scroll menu to find RO

Control Board: Press OK, SR will show on screen

Control Board: Press OK, SR will flash

New Remote: Press a button on the remote for 2 seconds

Control Board: Press OK



Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.