

LEXO 400-Capacity Receiver

PROGRAMMING INSTRUCTIONS



Wiring up your device to the Receiver

This receiver can be used as a Single (using either Channel 1 or Channel 2) or Dual (using both). Most motors use similar codes on their terminal blocks to define functions.


NO - Normally open = OSC, AUX, PB or Operate

COM - Common = 0V, NEG, GND, STP


POS - Positive = POS, V+, Power, PWR, 24DC, 24VDC, +PSV

GND - Negative = 0V, GND

4 Wire Setup

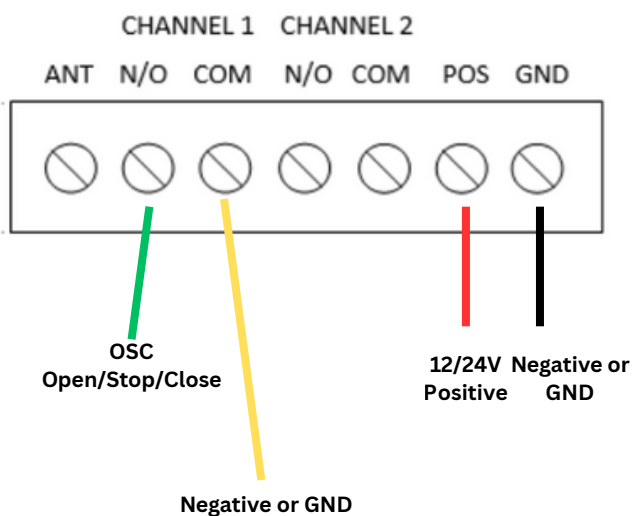

3 Wire Setup

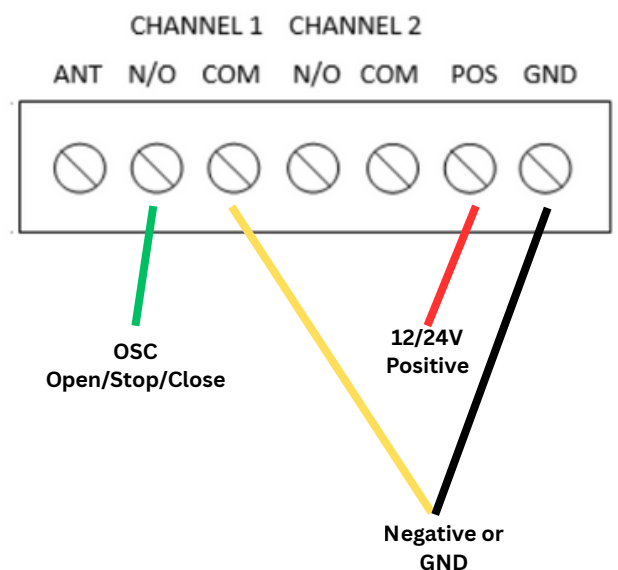

Programming to Channel 1 (LEARN1) or Channel 2 (LEARN2)

The wiring configuration determines which device is assigned to each channel

RECEIVER: Press the Learn1 or Learn2 once, LED will stay solid

REMOTE: Press the button on the remote, LED will flash 5 times then turn off

Clearing the Memory

RECEIVER: Hold the Learn1 or Learn2 button down for 5-10 seconds, LED will turn on then go out

