

NICE Era Inti Remote

PROGRAMMING INSTRUCTIONS



Control Boards will have either a plugin receiver or wire in receiver attached.

Receiver: Quickly Tap the Learn button once, Led will flash once per second.

New Remote: Press and hold the button you wish to assign, LED will have a long pause then 1 flash

New Remote: Release button, LED will flash twice to indicate programming complete.



Clearing Memory

Remote to Remote on OXI receivers


Hold working remote and new remote together so that they are touching at the top.

New Remote: Press and HOLD any button until the LED on the Working Remote LED lights up.

LED on working remote will start to blink

Working Remote: Press and HOLD any button on the remote until the New Remote LED lights up.

LED will go off indicating programming complete.

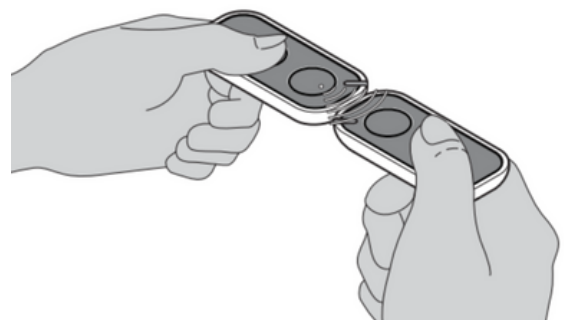

Remote to Remote Older Receivers

You will need to be within close proximity to your motor

New Remote: Press and HOLD any button on your remote for 5 seconds.

Working Remote: Press any button 3 times in one second intervals (ie hold for 1 second, release for 1 second x 3)

New Remote: Press the same button on your new remote.



Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information .