

CSI Remote

PROGRAMMING INSTRUCTIONS



Programming a new remote


Motor: Press the "Code" button, a dot will illuminate in the corner of the display

New Remote: Press any button on the new remote
Pause for two (2) seconds

New Remote: Press the button again, dot will flash to confirm remote acceptance.

Clearing the Memory

Motor: Press and HOLD the "Code" button until a C is indicated on the display.

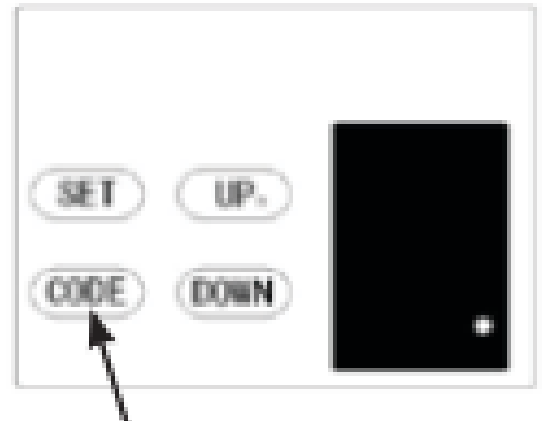

Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.