



AHOUSE Remote

PROGRAMMING INSTRUCTIONS

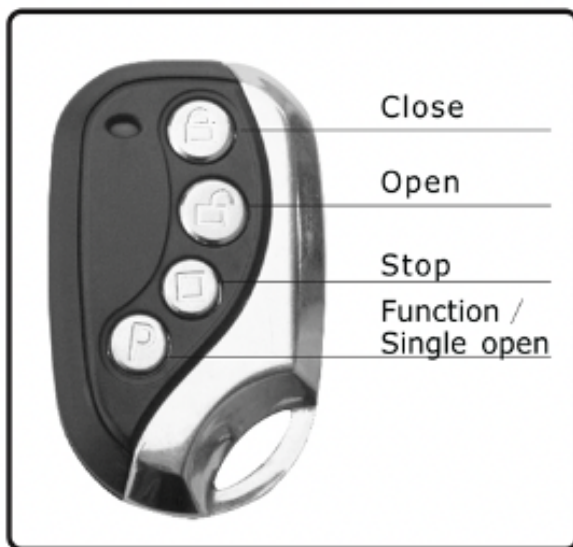

The remote control cyclic form is " open - stop - close "

Note: Pedestrian Opening on remote is only performed if a double swing system is installed.

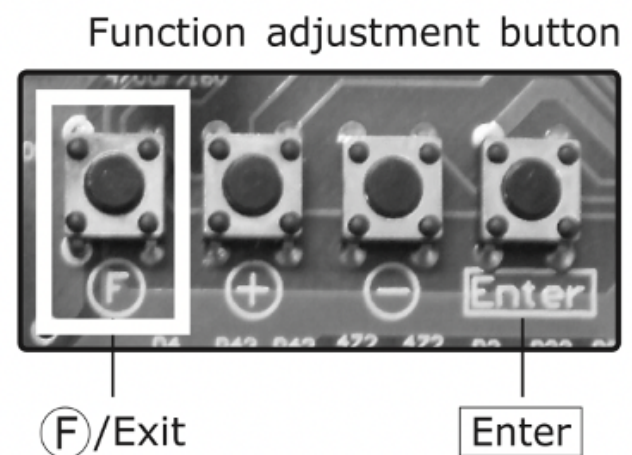

Pairing a New Remote

- OPENER: Press and Hold the "F" button on the control panel/ receiver card for approx two (2) seconds, indicator will display FF and continue flashing
- NEW REMOTE: Press any button on NEW remote, FF will stop flashing to confirm pairing to motor.

Deleting all Remotes from Opener

Press and Hold the "F" button on the control panel, receiver card for approximately two (2) seconds, indicator displays FF and keeps flashing. Hold down the "Enter" button until the display stops flashing.



Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information .