

LEXO AUTOMATION

PR4 and PR7 Remote

PROGRAMMING INSTRUCTIONS



Roller Door Openers

Control Panel: Press and HOLD the "CODE" button until the LED dot turns on.

New Remote: Press button on remote, LED dot will go off.

New Remote: Press same button again, LED dot will flash 8 times.

Clearing Memory

Control Panel: Press and HOLD the "CODE" button until LED flashes "C"



Overhead Garage Doors

Control Panel can be found inside the light cover

Control Panel: Press the RF learn button for 2 seconds, LED displays "CS"

New Remote: Press button on remote, LED will flash twice then turn off

Clearing Memory

Control Panel: Press and HOLD the "RF Learn" button until LED lights up then turns off.



Sliding and Swing Gates

Control Panel can be found inside the Gate Control Box. RF button positioning may vary on different control boards

Control Panel: Press the RF learn button for 2 seconds, LED displays "CS"

New Remote: Press button on remote, LED will flash twice then turn off

Clearing Memory

Control Panel: Press and HOLD the "RF Learn" button until LED lights up then turns off.



Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.