



07 3568 7888

www.retroremotes.com.au sales@retroremotes.com.au

ATA PTX6 Remote PROGRAMMING INSTRUCTIONS











ATS -2 and ATS-3

Pairing a New Remote via a working Genuine remote

WORKING REMOTE: Press the button that activates the door.

WORKING REMOTE: Use a pen to press the hidden button (in the middle of the 4 buttons), opener will flash and beep

NEW REMOTE: Press one of the four (4) buttons on the transmitter for 3 seconds.

Release for 3 seconds

NEW REMOTE: Press button again for 3 seconds.

03 04 05 06 07 REFER TO USER MANUAL SB GNDGNDGNDOSC 11 10 09 08

Pairing a New Remote via Control Panel/Receiver

OPENER: Remove the controls cover to access the buttons.

OPENER: Press the MODE (6) button repetitively until the REMOTE INDICATOR is lit

OPENER: Press and HOLD the DOWN (1) button to set Open / Stop / Close function. The Main light will start to flash rapidly.

NEW REMOTE: Press one of the four (4) buttons on the transmitter until the main light starts to flash rapidly, then release transmitter button

NEW REMOTE: Press the remote control button again until the main light stops flashing rapidly Release both buttons. Press the MODE button to exit. and refit controls cover. The remote button is now coded, press to test.

Clearing the Memory

OPENER: Remove the controls cover to access the buttons.

OPENER: Press the MODE (6) button repetitively until the REMOTE INDICATOR is lit.

OPENER: Press and HOLD the MODE (6) button for 10 seconds, release when flashing and beeping stops.



GDO, SGO-1 and NES500 and 800

Pairing a NEW Remote via a working Genuine remote

WORKING REMOTE: Press the button that activates the opener for the function you require.

WORKING REMOTE:Using a pen press on the Coding Bump in the middle of the remote for two (2) seconds.

NEW REMOTE: Press the remote button you would like to activate the opener for two (2) seconds Pause for two (2) seconds

NEW REMOTE: Press the button again for two (2) seconds Wait 10 seconds for the opener to deactivate learn mode

Pairing a New Remote via Control Panel/Receiver

Opener: Press and Hold the Blue "DOOR CODE" button on

the opener or SWI on the receiver board

New Remote: Press the remote button you would like to

activate the opener for two (2) seconds

Pause for two (2) seconds

New Remote: Press the button again for two (2) seconds Wait 10 seconds for the opener to deactivate learn mode

Deleting all Remotes from Opener

Turn off power to the Opener.

Press and Hold the "DOOR CODE" or SW1 Button whilst turning power back on. Continue to hold "DOOR CODE" button until coding LED illuminates.





