

GLIDEROL TM305C

PROGRAMMING INSTRUCTIONS



Programming to Glidermatic GRD2000 and Rollamatic GRDII (Roller Doors)


Control Box: Open the cover on the control box to reveal the control board.

Control Board: Press the Learn Button (2) found on the built in receiver top left, LED indicator will light up.

New Remote: Press and Hold the Desired button on your remote until LED light goes out.

Clearing the Memory

Motor: Press and HOLD the Learn Button for approx 10-12 seconds.

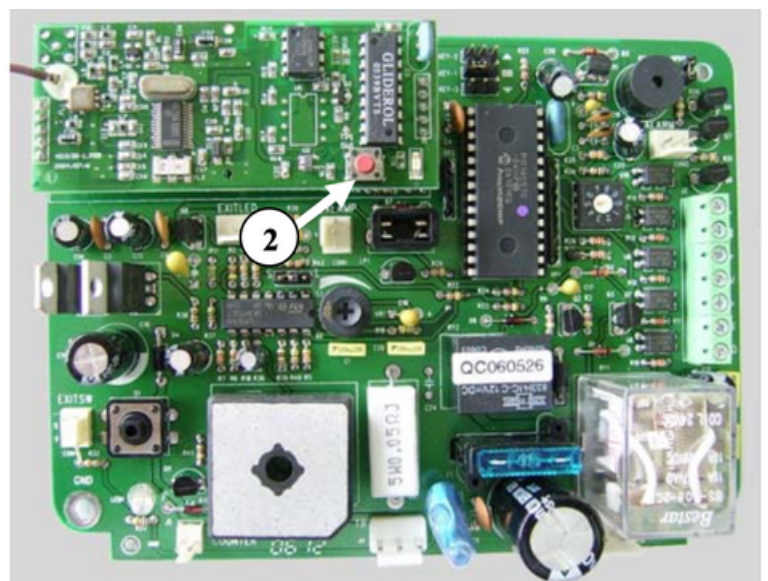

Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information.

Programming to Glidermatic GTS

Motor: Remove or loosen the screw on the GTS cover using a screw driver

Motor: Remove the cover by pulling in the directions of arrows shown in figure


Motor: Press the LEARN button on receiver, red LED will illuminate.

New Remote: Press the large button on the remote until led light turns off.



Clearing the Memory

Motor: Press and HOLD the learn button for approx 10-12 seconds

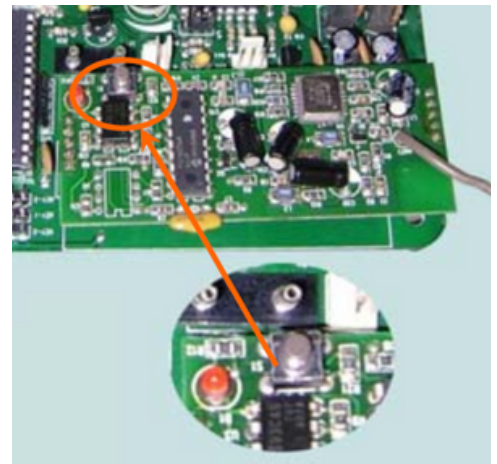

Programming to GTS 2000 Optima

Motor: Remove the light cover by pulling down on tab at front of unit.

Motor: Press the LEARN button on receiver, red LED will illuminate.

New Remote: Press the large button on the remote until led light turns off.



Clearing the Memory

Motor: Press and HOLD the learn button for approx 10-12 seconds

