

SteelLine/ BOSS HT4 Remote

PROGRAMMING INSTRUCTIONS




HT3 (Blue LED Only)

Locating the LEARN button

Roller Door - Remove the Faceplate by inserting a flathead screwdriver into the slot located on the bottom side of the face plate. Learn button is the small button under the large AQUA push button.

Overhead - On the back side of the motor you will find the control panel. Learn Button "RADIO SET" is found to the left of the four adjustment buttons.

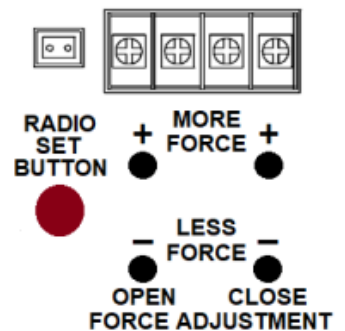

Programming the Remote

- **OPENER:** Press and Release the Radio Set Button, LED light or Courtesy Light will turn on to confirm learn mode.
- **NEW REMOTE:** Press the button on your NEW remote, Green LED or Courtesy light will blink twice.
- **ROLLER DOOR ONLY:** Once finished Press and Release the Radio Set Button to leave Learn Mode.

Clearing the Openers Memory

ROLLER DOOR

- **OPENER:** Turn Power off to the opener
- **OPENER:** Press and Hold Radio Set button whilst turning on power, 3 LED lights will flash twice to confirm deletion.

OVERHEAD

- **OPENER:** Press and hold the Radio Set button for 5-8 seconds, Courtesy light will flash 7 times to confirm deletion.



Warning: This product may contain a pre-installed Lithium Coin Battery. Please keep product and batteries out of reach of children. Please see [button battery safety information](#) from the Australian Competition & Consumer Commission (ACCC) for more information .